



# EC-1001

## 快速操作指南

### QUICK START GUIDE



[www.easytv.com.hk](http://www.easytv.com.hk)

所有商標及標誌均由其各自所擁有者所有  
All trademarks and logos are the property of their respective owner.



## 聲明和注意事項

- 在使用此設備前，請閱讀此說明書的所有資訊或者盒子裏的其他產品說明。同時，請保留此說明書以備將來參考使用。
- 此產品上的應用程式及電視市場均屬第三方擁有，EasyTV均不就其擁有所謂、功能及法律負上任何責任。
- 此產品的功能會因應用家的網絡速度有所影響。
- 請按照操作指導使用，不得用於其他用途。
- 請不要在設備上放置重的物品，設備避開潮濕、灰塵和煙霧環境。
- 請不要使用水、化學類品等清理設備，用軟布清潔表面即可。
- 為了避免損壞設備，確保不要跌落、撞擊、彎曲、碰撞設備。
- 保持設備遠離強大的磁場環境。
- 請不要自己分解或者更改設備。
- 請使用EasyTV認可的配件，使用個人或者沒有認可的配件可能會損壞您的設備，由此造成的故障，不在廠家保修範圍內。
- 由於物理撞擊，閃電和電源故障會導致資料損壞。
- 若要清潔EasyTV Box，請拔下電源線與所有接線，並避免沾濕機身上任何的開口處。



# 目錄

## 步驟1:

### 連接

● 包裝盒內的項目	1
● 你需要的項目	1
● 產品概觀	2
● 連接易視盒	3 - 5

## 步驟2:

### 設定

● 網絡設定	6 - 7
● 連上電視市場	8

9

## 步驟3:

### 預備, 收看頻道

● 體感遙控器功能	9
● 額外體感搖控器配對	10
● 軟件應用-電視市場	11
● 軟件應用-智能播放清單	12

13

14

15

16

## 步驟4:

### 服務與支援

● 常見問題	13 - 14
● 狀態顯示燈	15
● 產品編號	15

16

# 1

步驟1  
連接

## 連接

# 包裝盒內的項目



易視盒



體感遙控器



Mini USB線



AV轉換線



HDMI線



變壓器

## 你需要的項目

若要開始使用易視盒，你需要以下項目：

## 電視

至少符合以下其中一種解像度的螢幕：



- 1080p
- 1080i
- 720p (預設解像度)
- 720i
- 480p
- 480i
- 576 AV (CVBS)
- 480 AV (CVBS)

## 其他

- LAN 線或無線網絡設備
- AV 線

# 連接

## 產品概觀

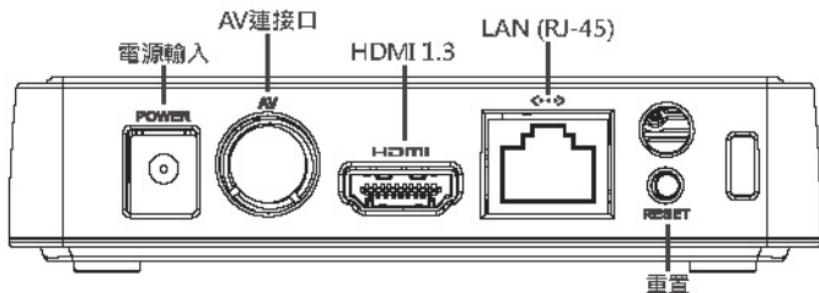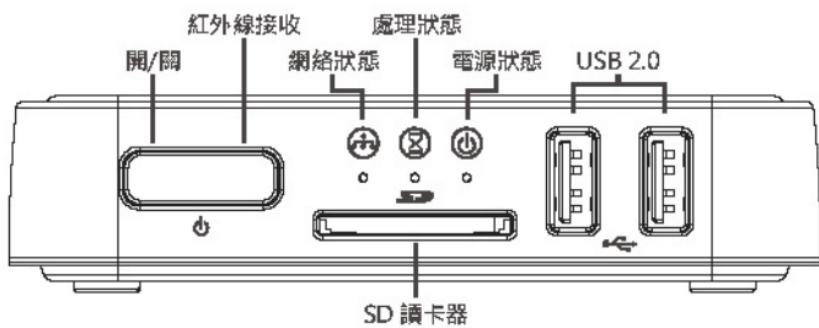

## 連接

# 連接易視盒

## 如何安裝？

只需簡單三個步驟，便能盡情享受網路電視的精彩內容！

1a

### 連接HDMI纜線



1b

### 連接AV纜線



2

### 連接LAN線 (如選用Wi-Fi無線網路的話，可選擇免除此連接)



\* 易視盒支援Wi-Fi無線網路功能，你可選擇啟動後連接家中無線網路以連接互聯網。

\* 注意：此產品的功能會因應用家的網絡速度有所影響。

3

### 連接電源



\* 連接電源線後，易視盒將自動啟動。


注意：請先連接HDMI/AV纜線再啟動電源，否則可能會影響解像度表現。

## 連接

# 連接易視盒-解像度設定(HDMI)

啟動易視盒後會有解像度設定頁面，請按“是”調教畫面解像度，再到顯示設定中的“輸出模式”選擇使用中的電視輸出模式，再按“是”作保存。

1

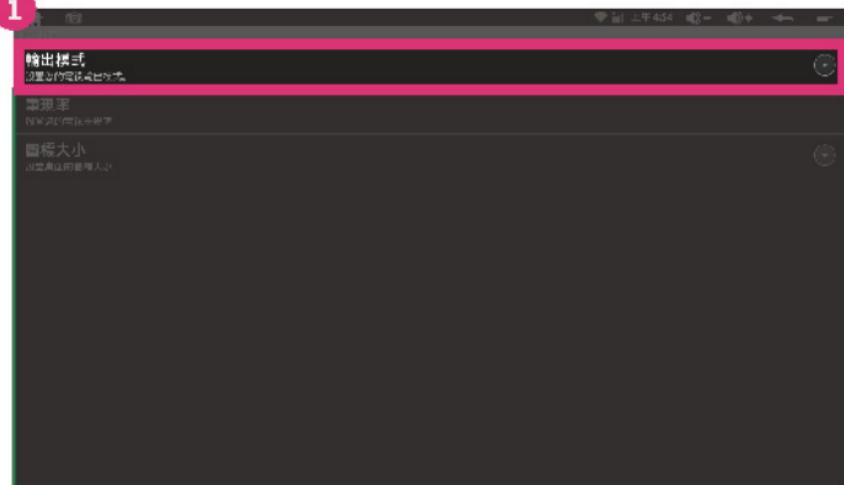

2



## 連接

# 連接易視盒-解像度設定 (AV)

啟動易視盒後，請先於遙控器上按“AV”鍵，之後會有解像度設定頁面，請按“是”調教畫面解像度，再到顯示設定中的“輸出模式”選擇使用中的電視輸出模式(480cvbs/576cvbs)，再按“是”作保存。



# 2

## 步驟2 設定

## 設定

# 網絡設定



## 開啟Wi-Fi

1. 點擊網絡設定，打開Wi-Fi設定。
2. 選中Wi-Fi即可將其打開。設備會進行掃描並查找可用的Wi-Fi網路，然後列出找到的Wi-Fi網路的名稱。鎖定圖示表示此網路受到保護。
3. 點擊你將使用的網路即可與其連接。
4. 如網路是受保護的，你需輸入所有必需的安全憑據，方能連接該網路。

設備將會連接到該無線網路。系統會保存您輸入的所有憑據，因此，下次您開機時在該網路的覆蓋範圍時，設備會自動與其連接。

注意：此產品的功能會因應用家的網絡速度有所影響。

## 設定

# 網路設定

## 網路通知

預設情況下，如果Wi-Fi處於打開狀態，當您的設備檢測到開放的Wi-Fi網路時，就會顯現在Wi-Fi網路狀態條的下方，您可以點擊相關Wi-Fi名稱進行連接。

1. 如果沒有打開Wi-Fi，請將其打開。
2. 在“Wi-Fi設置”螢幕中，選中網路通知。您可以取消選中該選項，以停止接收通知。

## 添加Wi-Fi 網路

如果網路是開放的，系統會提示您確認要連接到該網路，此時點擊連接即可。

如果網路是受保護的，則系統會提示您輸入密碼或其他憑據。

連接到某個網路後，您可以在“Wi-Fi 設置”螢幕上點擊該網路的名稱，以查看關於速度、安全性、位址及其相關設置的詳情。

## 刪除Wi-Fi 網路

您可以從設備中取消保存某個已添加的Wi-Fi網路。例如，如果您不希望設備自動連接到某個Wi-Fi 網路，或您不再使用某個Wi-Fi網路，則可以從設備中取消保存該網路。

1. 如果沒有打開Wi-Fi，請將其打開。
2. 在“Wi-Fi 設置”螢幕中，點擊並按住該網路的名稱。
3. 在打開的對話方塊中，點擊清除。

## 設定

# 連接電視市場

您可按照以下圖示進入電視市場



首次使用，需要根據螢幕上的提示輸入電郵及密碼註冊，註冊成功後，選擇您需要的應用程式操作安裝及管理：



# 3

步驟3

## 預備, 收看頻道

# 預備, 收看頻道 體感遙控器功能

體感遙控器(正面)▶



注意: 放大及縮小功能適用於瀏覽網頁使用

體感遙控器(背面)



體感遙控器集滑鼠及鍵盤於一身，用家可以隨時打字並進行搜索，按下“Alt”鍵即可打出按鍵的另一端表達文字(如數字等)，再按一次“Alt”即可返回字母輸入。

預備, 收看頻道

## 額外體感搖控器配對

如若需要配對額外的體感搖控器時，則需跟隨以下步驟：

在遙控器後的鍵盤同時按下“ENTER”及“C”鍵直至左上角的藍燈亮起即可進行配對。



預備，收看頻道

## 軟件應用 - 電視市場

登入電視市場後(詳情見第8頁)，請按遙控器上的Menu鍵，即可更新應用程式清單，搜索或更新相關頻道的應用程式。



通過電視市場搜索、下載、管理您的應用程式，也可輕易瞭解最新應用程式。



聲明：以上應用程式已獲取其同意使用其標誌及內容 -

## 預備, 收看頻道

# 軟件應用 - 智能播放清單

易視盒具有智能播放功能，即產品能透過點擊率記錄您的使用取向，並在下次使用易視盒時自動開啟點擊率最高的應用程式。您亦能在“我的最愛”清單上選取相關的應用程式作智能播放。

我的最愛設定介面



用戶體驗介面



聲明：以上應用程式已獲取其同意使用其標誌及內容。

# 4

## 步驟4 服務與支援

## 服務與支援 常見問題

如出現不能正常使用的情況，請檢查下列原因：

- 您的電視機是否開啟了電源
- 易視盒是否接通電源
- 是否接通HDMI或AV線

**在線視頻播放不穩定**

- 檢查網線或無線網絡是否連接正常 / 網路連接狀況訊號

**如果在使用易視盒時出現當機：**

請嘗試關機或拔下電源再重新啟動易視盒。

**解像度設定問題-輸出模式選擇錯誤**

問. 如果我的電視為HDMI輸出，但不小心選擇了較電視所支援最高解像度的制式更高之輸出模式(如所用電視支援最高720p解像度的制式，卻於輸出模式選擇了1080p)，那我該如何重新設定？

答. 此輸出模式選擇錯誤會導致電視黑屏，如你家中有一台能夠支援

1080p制式之電視，請將易視盒連接到其電視，啟動易視盒並將其輸出模式下調回720p。輸出像素的問題便能解決。

如果你不能透過上述方式重置輸出模式，您需要先關機，再按易視盒背部的〈Reset〉鍵並同時開機，你將進入易視盒原廠設定模式，此時你需要先選〈factory reset〉，再點選〈reboot system now〉重新開機以完成原廠設定。

\*原廠重設後所有應用程式及個人設定將會流失

問. 如果我的電視為HDMI輸出，但不小心於搖控器上按了“AV”鍵，那我該如何重新設定？

答. 您需要拔下電源再重新啟動易視盒。

## 服務與支援 常見問題

問. 如果我的電視為HDMI輸出，但不小心選擇了AV (CVBS)輸出模式，那我該如何重新設定？

答. 此輸出模式選擇錯誤會導致電視黑屏，如你家中有AV線，你可透過AV線把易視盒接駁到電視，在電視的訊號源上選擇AV，並在AV輸出中把易視盒設定回HDMI輸出。

如果你不能透過上述方式重置輸出模式，您需要先關機，再按易視盒背部的〈Reset〉鍵並同時開機，你將進入易視盒原廠設定模式，此時你需要先選〈factory reset〉，再點選〈reboot system now〉重新開機以完成原廠設定。

\*原廠重設後所有應用程式及個人設定將會流失

問. 如果我的電視為AV (CVBS)輸出，但於輸出模式選擇了HDMI制式(即480p/480i/720p/720i/1080p/1080i)，那我該如何重新設定？

答. 你需要先關機，再重新啟動易視盒，等待處理燈號熄滅後，再按一下“AV”鍵以轉換至AV模式。此時你需要到〈解像度設定〉重新選擇正確的輸出模式以正常運作易視盒。

如果你不能透過以上方式重置輸出模式，您需要先關機，再按易視盒背部的〈Reset〉鍵並同時開機，你將進入易視盒原廠設定模式，此時你需要先選〈factory reset〉，再點選〈reboot system now〉重新開機以完成原廠設定。


\*原廠重設後所有應用程式及個人設定將會流失

大部分的易視盒問題都可以依照本章節裡的建議快速解決。如需要其他的提示和難解答的資訊，請參閱易視盒網頁，

<http://www.easytv.com.hk/> 

## 服務與支援 狀態顯示燈

易視盒前方有三個狀態指示燈會指所發生的情況

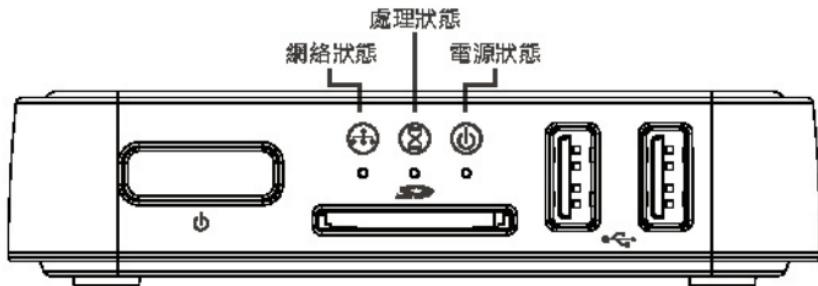

若易視盒	則狀態指示燈會
開啟	◎ 藍燈持續發亮
關機	◎ 熄滅
連接網絡時	◎ 橙燈閃爍
數據處理時	◎ 紅燈閃爍

## 產品編號

產品編號印在易視盒的底部。





## Terms and conditions

- Please read all the information in this user manual or any other literature included in the box before using the product. Please keep this manual for future reference.
- All the apps and the TV store are the property of the respective third party. EasyTV will not be responsible for its ownership, function or legal responsibility.
- This product function is dependent on the user's network traffic condition.
- Operate the device only as intended. Do not use for any other purpose.
- Do not place heavy objects on the device and keep the device away from humid, dusty and smoky environments.
- Do not use water, chemicals or deter to clean the device. Clean the surface with a soft cloth.
- Use only authorized parts and accessories by EasyTV. Parts and accessories not approved for use with the device may damage the unit.
- Data may be lost due to physical impact, lightning and power failure.
- Unplug the power cord and all cables before cleaning EasyTV Box.

# Content

## Step 1:

### Connect

● What's in the box .....	16
● What You Need .....	16
● EasyTV Box at a Glance .....	17
● Setting Up EasyTV Box .....	18 - 20

## Step 2:

### Configure

● Network Configuration .....	21 - 22
● Connecting to TV Store .....	23

## Step 3:

### Ready, Set, Watch

● Remote Basic Function .....	24
● Pairing of Extra Remote .....	25
● Software Application - TV Store .....	26
● Software Application - Auto Launch .....	27

## Step 4:

### Service and Support

● Frequent Asked Questions .....	28 - 29
● Status Light .....	30
● Product Serial Number .....	30

# 1

Step 1  
Connect

## Connect

# What's in the BOX



EasyTV Box



Air Mouse



Mini USB Cable



AV Converter



HDMI Cable



Power Adapter

## What you need

To start using your EasyTV Box, you need the following

### TV

An enhanced definition or high definition TV capable of at least one of the following resolutions:



- 1080p
- 720p (Default Resolution)
- 480p
- 576 AV (CVBS)
- 480 AV (CVBS)
- 1080i
- 720i
- 480i

### Others

- LAN cable or Wireless Network Setting
- AV Cable

Connect

## EasyTV Box at a Glance

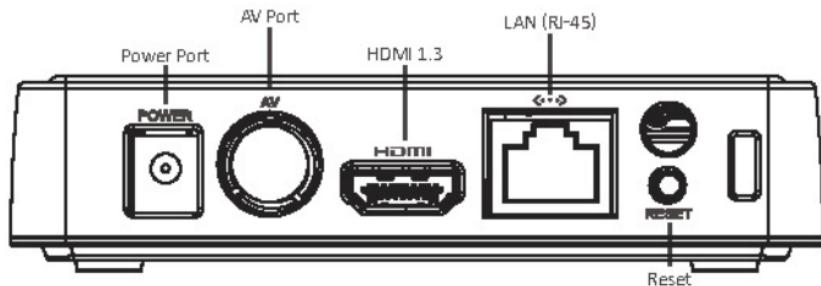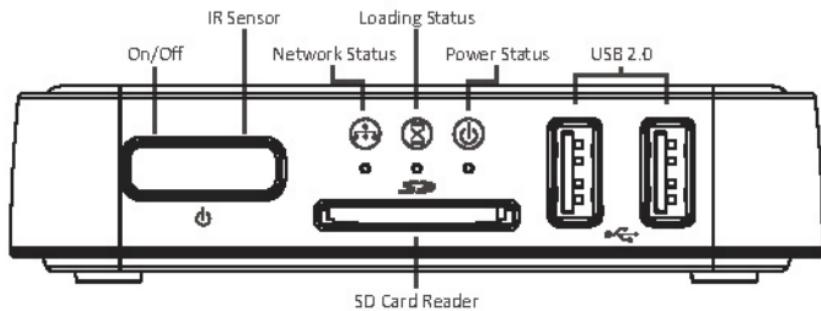

## Connect


# Setting Up EasyTV Box

## How to Set up?

Only 3 steps can lead you to enjoy our EasyTV Box


**1a**

Connect HDMI Cable

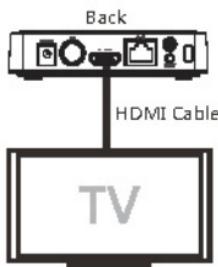

**1b**

Connect AV Cable

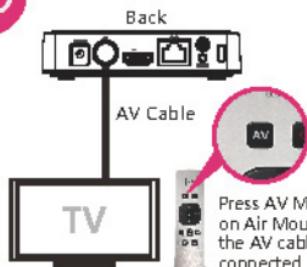

**2**

Connect by the LAN

(This step can be skipped if using Wi-Fi connection)



\* EasyTV Box supports Wi-Fi connection. You may connect to the internet using your WiFi connection at home.

\* Notice: This product function is dependent on the user's network traffic condition.

**3**

Plug the Power Cable





\* EasyTV Box will startup when power plug in.

**Notice:** Please connect HDMI/AV cable before plugging the power, otherwise the resolution will be affected

## Connect

# Setting Up EasyTV Box - Resolution (HDMI)



Once EasyTV Box is in power, you will be asked to set your resolution. Press "Yes" to go to the Display Settings and choose "Output mode" to set your TV output mode. Click "Yes" to save your current setting.

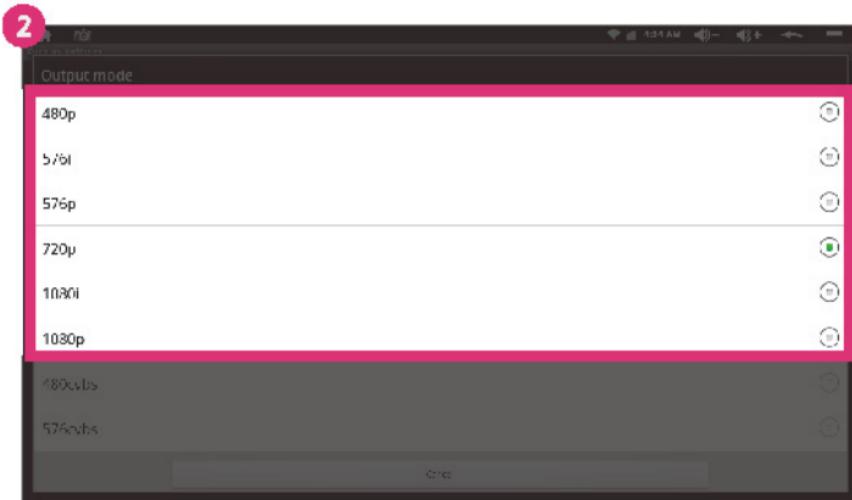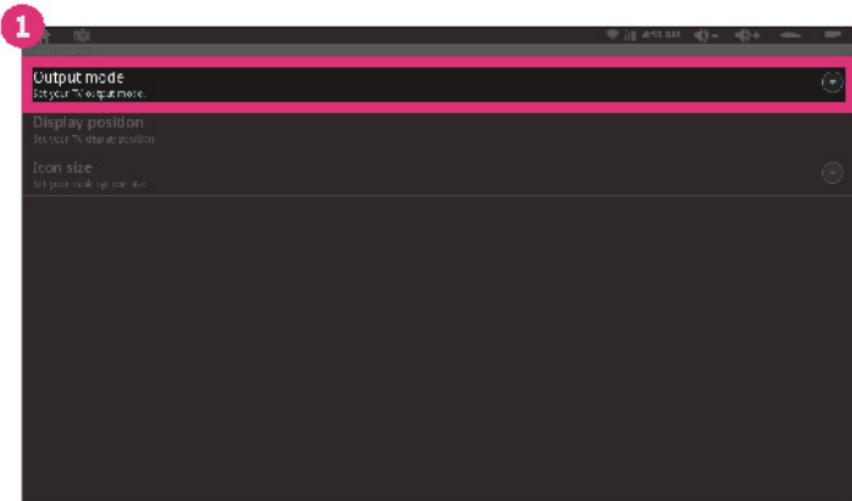

## Connect

# Setting Up EasyTV Box - Resolution [AV]

Once EasyTV Box is in power, press "AV" button on the remote, you will then be asked to set your resolution. Press "Yes" to go to the Display Settings and choose "Output mode" to set your TV output mode (480CVBS/576CVBS). Click "Yes" to save your current setting.

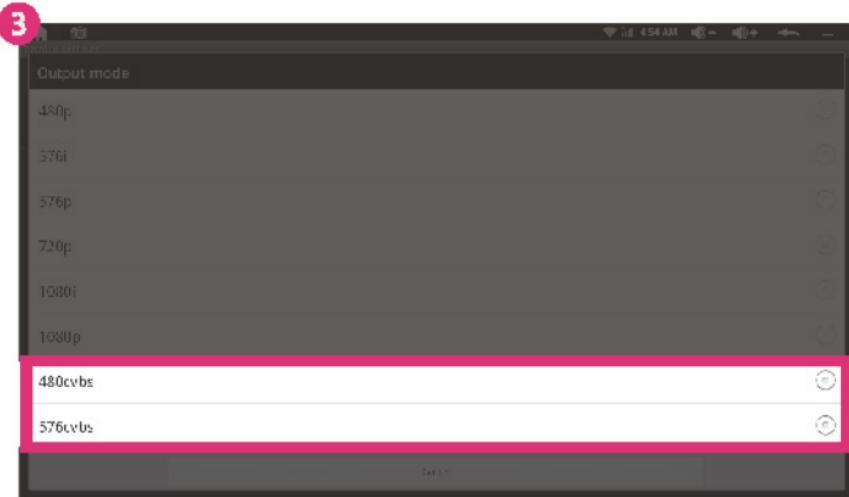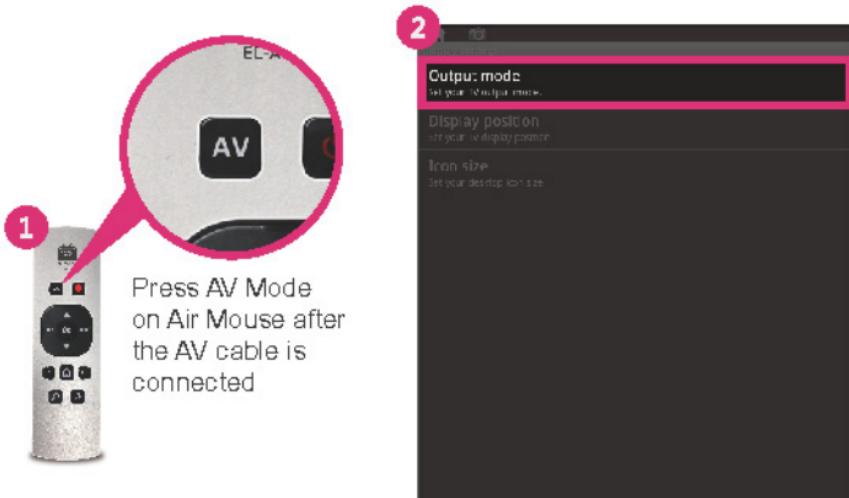

# 2

Step 2  
**Configure**

# Configure

## Network Configuration



### Connect to Wi-Fi Network

1. Click Wifi Setting.
2. Check the box to Turn On Wi-Fi  
(Device auto-searches available Wifi AP and show on screen. AP with lock means it is in password protected, Once an AP with connected record is found, device will auto connect to that AP)
3. Click the AP name you would like to connect  
(If the AP is password protected, enter correct password and click connect.)
4. If the network is protected, please input security verification

Device will then connect to that network and save as record to auto-connect next time when device is in the network coverage.

**Notice:** This product function is dependent on the user's network traffic condition.

## Configure

# Network Configuration

### ***Network availability Notification***

When WiFi is enabled and WiFi network is detected available, the AP name will show on the status bar that can be clicked to connect.

1. If Wi-Fi is not enabled, please turn it on
2. You may disable network notification by steps 1) Select network notification on Wi-Fi Setting screen. 2) Uncheck network notification

### ***Adding WiFi Network***

If SSID of Wi-Fi network is broadcasting, you need to add this network to connect. You can also add this network outside Wi-Fi coverage.

If connecting to protected network, you may contact the network administrator to obtain authorization with correct password and verification.

After connect to a certain network, connection details such as speed, security, address and other related settings can be checked by clicking the AP name. Device will then connect to that network and save as record to auto-connect next time when device is in the network coverage

### ***Delete the WiFi connection record***


You may delete certain of saved networks if you do not want the device auto-connect to those.

1. Enable WiFi
2. In WiFi Setting page, click and hold the name of the network (want to delete)
3. In new opened dialog box, click Unsave Network

# Configure

## Connecting to TV Store

You can enter TV store by the following steps,

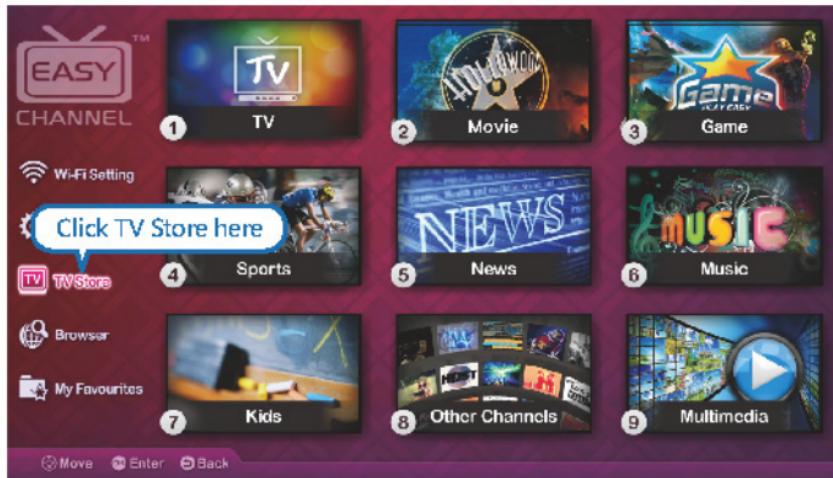

You have to register a new account when starting to use TV Store, please following the instructions to login your account or register a new account. After registration, you can download and manage the apps through TV Store.



# 3

Step 3

## Ready, Set, Watch

Ready, Set, Watch

## Remote Basic Function

AirMouse (Front) ▶



Note: Zoom in & Zoom out  
is for browse use.

AirMouse (Back) ▶



The remote integrates mouse and keyboard function. Users can type and search by the keyboard. Press "Alt" to type number and other symbols represented. You may press "Alt" again to go back for character input.

Ready, Set, Watch

## Pairing of Extra Remote


If extra remote is used for EasyTV Box, please follow the steps below, you have to press and hold "ENTER" and "C" button for few seconds until the blue light on the top left turns on to pair EasyTV Box and the remote.




Ready, Set, Watch

## Software Application - TV Store

After registration in TV Store (More details on P.23), press "Menu" button and update the app list to search/update the apps in relevant channels.

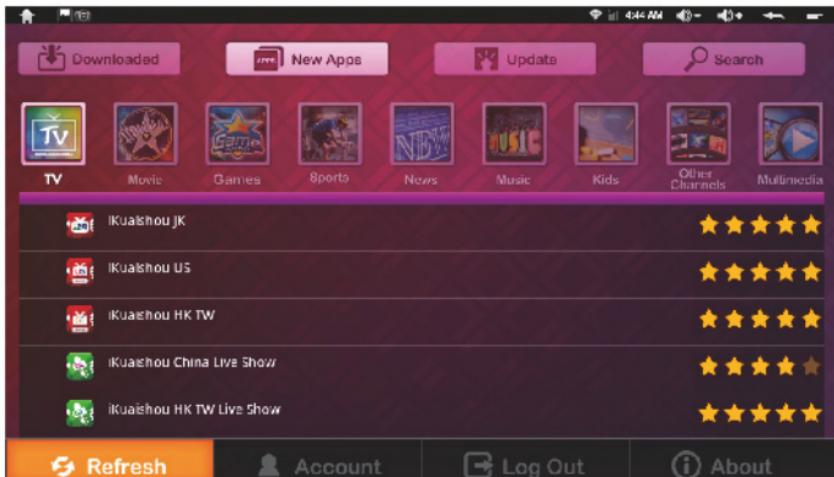

You can search more latest apps  
and manage your apps in TV Store

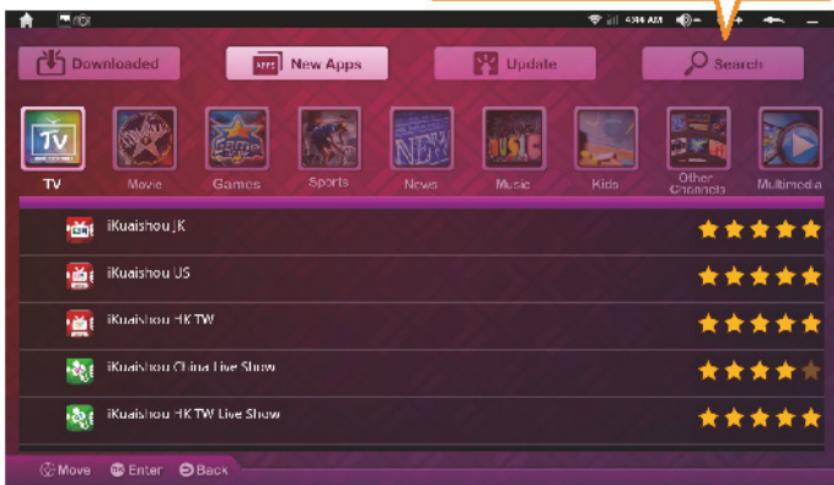


Disclaimer: Consent has been obtained for the above apps for its logos and content.

## Ready, Set, Watch


# Software Application - Auto Launch

EasyTV Box contains auto launch function which means to launch the most popular channel or app based on user's watch time to make priority during startup every time. You may also select your favorite apps as auto launch in the "Favorite" List,

*My Favorite Interface*

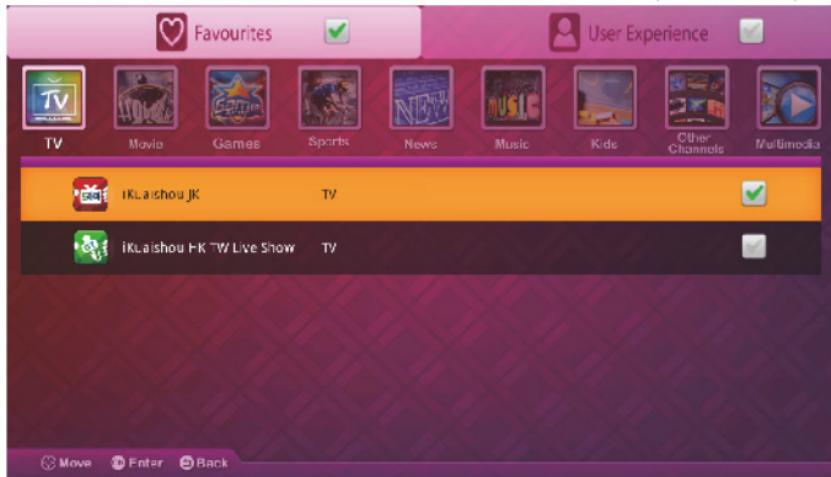

*User Experience Interface*

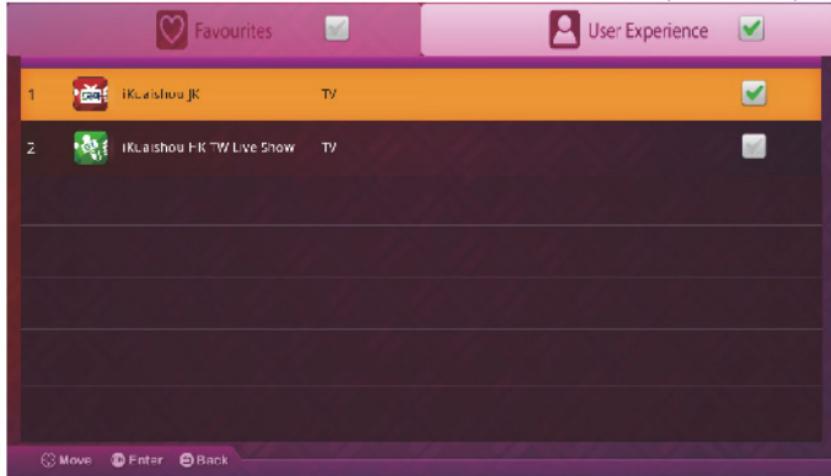

Disclaimer: Consent has been obtained for the above apps for its logos and content.

# 4

Step 4

## Service and Support

## Frequent Asked Questions

### ***If you find abnormal operation in EasyTV Box please check the following items:***

- Check the power source from your TV
- Check the power source from EasyTV Box
- Check the HDMI cable or AV Cable connections

### ***Online Movie Unstable***

- Check the Ethernet connection and the network status of your router
- Check the network status of EasyTV Box

### ***If EasyTV Box hangs in operation:***

Please switch off the EasyTV Box or unplug the Power to restart the box.

### ***Resolution Setting Problem - Wrong selection on output mode***

Q. My television is as HDMI out but I have selected the resolution output mode that is higher than the TV can support (e.g. my television can only support 720p resolution as highest, but I have chosen 1080p in output mode). How can I reset output mode afterwards?

A. The TV will display black screen. You have to restart the EasyTV Box. Then press "Reset" button and switch on EasyTV Box at the time. Press "factory reset" to get the default setting from the factory. And choose "Reboot System".

Please note all the settings in the EasyTV box including wireless network setting, apps download will be removed after factory reset. You may have to reset all the things and download relevant apps in the TV Store.

## Service and Support

# Frequent Asked Questions

Q. My television is as HDMI out but I have wrongly pressed the "AV" button on the remote. How can I reset output mode afterwards?

A. You have to unplug the power and restart the EasyTV Box.

Q. My television is as HDMI out but I have wrongly selected AV (CVBS out). How can I reset output mode afterwards?

A. The TV will display black screen. If you have an AV Cable at home, you may make use of the cable to connect EasyTV Box to the TV. Then select AV from the input source and set it back HDMI out.

If you cannot solve the problem in the above way, you have to switch off the box. Press the reset button at the back of the box and switch it on at the same time, you will enter to "Factory Reset" mode. Select "Factory Reset" and then "Reboot System Now" to restart the unit.

\*After factory reset, all the applications downloaded and setting memory will be lost.

Q. My television is as AV (CVBS) out but I have selected the HDMI output mode (i.e. 480p/480i/720p/720i/1080p/1080i). How can I reset output mode afterwards?

A. You have to restart the EasyTV Box. Once the light turns off, press "AV" button to change to AV mode. You will need to go to "Setting" Page to select the normal output mode to operate the box.

If you cannot solve the problem in the above way, you have to switch off the box. Press the reset button at the back of the box and switch it on at the same time, you will enter to "Factory Reset" mode. Select "Factory Reset" and then "Reboot System Now" to restart the unit.

\*After factory reset, all the applications downloaded and setting memory will be lost.

Most of the questions regarding the EasyTV Box can be found in this user manual. If further assistance or help is needed, you may also visit more details on our website,


<http://www.easytv.com.hk/>



## Service and Support

### Status Light

***EasyTV Box has status lights on the front that indicates what's happening***

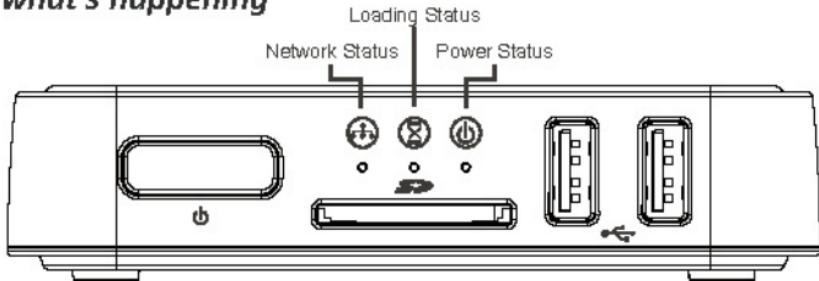

If EasyTV Box is	The status light
Power On	⊕ Blue Light On
Power Off	⊖ Blue Light Off
Connect to network	⊕ Orange Light Blinks
Loading	⊖ Red Light Blinks

### Product Serial Number

The product serial number is printed on the bottom of EasyTV Box.







EasyTV Box  
易視盒

EC-1001

[www.easytv.com.hk](http://www.easytv.com.hk)

